

SPYEGLOSS




3M Vikuiti Technology Film Installation Instructions

Tools:

Ruler, squeegee, water bottle sprayer, soft clean microfiber towel, pre-mask (optional, best for cut shapes)



Original File

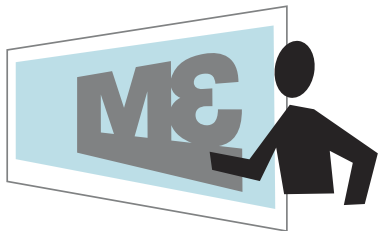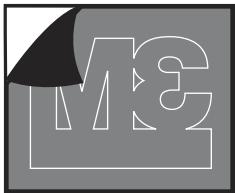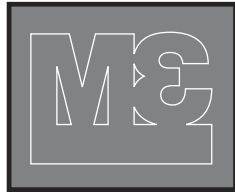

Back of Window



Front of Window

First, clean the surface/window that you will be applying the film to using water and a clean squeegee. Make sure there is no dirt or dust, as it will be very obvious once the screen is projected on.

Because the front of the film is against the white paper backing, if you want to cut a shape out of the film, you need to first reverse your file.

After your file is reversed, cut the shape out of the film.

Remove the background, and any unwanted film from around the shape.

If you are cutting out a shape, we recommend using 3M's pre-mask (a protective, removable tape to hold the shape in place) and press the pre-mask firmly on top of the image. Remove the white paper backing from the film. As you remove the white paper, continuously spray with water. Both the film and the pre-mask should be wet.

Spray the window with water, and using your ruler, make sure your image is aligned the way you want on the window. Press the smooth, sticky, wet side onto the glass/window surface. Using the squeegee, work from the center outwards, smooth out any air bubbles and press onto glass. Remove the pre-mask.

Dry the back of the screen (the rough beaded side) and the glass/window around the shape with a clean, soft microfiber cloth. Project from the back of the image onto the beaded side of the film.

For technical assistance or ordering information contact Spyegloss at 612.435.2246

